This is the Revision E verion of the Compass8 module. The status of this project is finished.

# **Compass8 Module (Revision E)**

### **Table of Contents**

This document is also available in <u>PDF</u> format.

- 1. Introduction
- 2. Programming
- 3. Hardware
  - ♦ 3.1 Circuit Schematic
  - ♦ 3.2 Printed Circuit Board
- 4. Software
- <u>5. Issues</u>

### 1. Introduction

The Compass8 module is used to connect to a <u>Dinsmore Instrument Company</u> digital compass. The compass can report the 8 bearings (N, NE, E, SE, S, SW, W, NW.)

I currently only have one of the digital compass modules and it has less than ideal behavior. My compass module works best in an envionment which has some vibration, otherwise the compass is prone to sticking and can be off by as much as 90 degrees. There is some significant hysterisis as rotation is changed; trying to steer a robot straight by aligning the robot with a bearing boundary (e.g. between N and NE) will not yield a very straight course due to this observed hysterisis effect. Of course, I may have a `lemon' module and other people might have different experiences with their moduels. However, if all you want is basic compass bearing, the Dinsmore digital compass module does seem to meet that requirement at a very reasoable cost.

If you want a more accurate compass module, you might want to try the CMPS01 magnetic compass module available at: Robot Electronics.

# 2. Programming

The basic operation is to send a query to the Compass8 Module to read the 3 bits of bearing data.

The Compass8 Module supports <u>Module Interrupt Protocol</u>. The interrupt pending bit is set whenever the the formula:

B&M

is non-zero, where:

- B is the bearing expanded out into an 8-bit vector with only 1 bit turned on,
- M is the interrupt mask, and
- & is bit-wise AND

Once the interrupt pending bit is set, it must be explicitly cleared by the user.

### Compass8 Module (Revision E)

The Compass8 Module supports both the standard <u>shared commands</u> and the <u>shared interrupt commands</u> in addition to the following commands:

Command	Send/ Receive			В	yte	Val	ue			Discussion
		7	6	5	4	3	2	1	0	
Read Bearing	Send	0	0	0	0	0	0	0	0	Return bearing bbb (N=000, NE=001, E=010, SE=011, S=100, SW=101, W=110, NW=111)
	Receive	0	0	0	0	0	b	b	b	
Read Interrupt Mask	Send	0	0	0	0	0	0	0	1	Return interrupt mask mmmmmmmm (N, NE, E, SE, S, SW, W, NW)
	Receive	m	m	m	m	m	m	m	m	
Read Raw	Send	0	0	0	0	0	0	1	0	Return raw data abcd
	Receive	0	0	0	0	a	b	c	d	
Set Interrupt Mask	Send	0	0	0	0	0	0	1	1	Set interrupt mask to mmmmmmmm (N, NE, E, SE, S, SW, W, NW)
	Send	m	m	m	m	m	m	m	m	
Read Interrupt Bits	Send	1	1	1	0	1	1	1	1	Return the interrupt pending bit $p$ and the interrupt enable bit $e$ .
	Receive	0	0	0	0	0	0	e	p	
Set Interrupt Commands	Send	1	1	1	1	0	c	c	c	Set Interrupt Command ccc.
Shared Commands	Send	1	1	1	1	1	c	c	c	Execute Shared Command ccc.


# 3. Hardware

The hardware consists of a circuit schematic and a printed circuit board.

## 3.1 Circuit Schematic

The schematic for the Compass8 Module is shown below:

3. Hardware 2

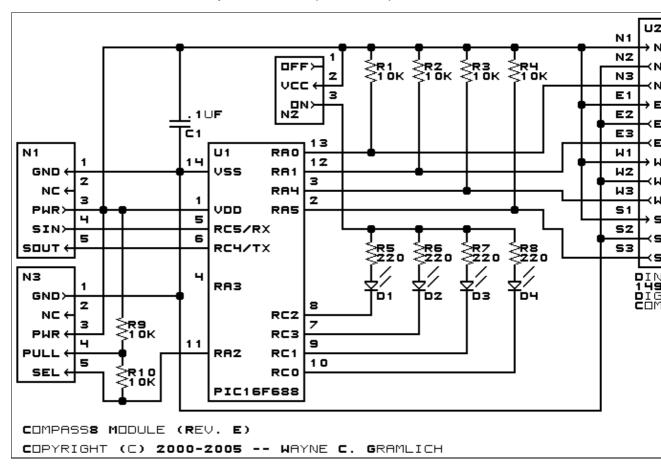

The parts list kept in a separate file — compass8.ptl.

### 3.2 Printed Circuit Board

The printed circuit board files are listed below:

compass8 back.png

The solder side layer.

compass8 front.png

The component side layer.

compass8 artwork.png

The artwork layer.

compass8.gbl

The RS-272X "Gerber" back (solder side) layer.

compass8.gtl

The RS-272X "Gerber" top (component side) layer.

compass8.gal

The RS-272X "Gerber" artwork layer.

compass8.drl

The "Excellon" NC drill file.

compass8.tol

The "Excellon" tool rack file.

3.2 Printed Circuit Board

# 4. Software

The Compass8 software is available as one of:

compass8.ucl

The  $\mu CL$  source file.

compass8.asm

The resulting human readable PIC assembly file.

compass8.lsi

The resulting human readable PIC listing file.

compass8.hex

The resulting Intel<sup>®</sup> Hex file.

# 5. Issues

Any fabrication issues that come up are listed here.

Copyright (c) 2001–2004 by Wayne C. Gramlich. All rights reserved.

4. Software